

Maven Front Basket

— Instruction Manual

Integral Integralelectrics.com


Integral

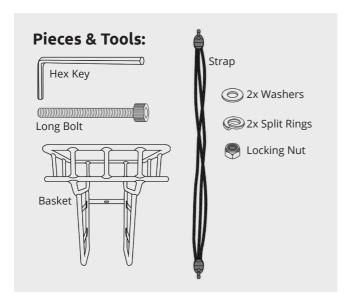


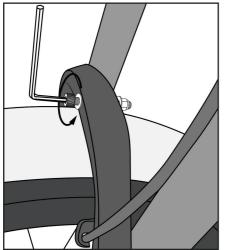


Step 1: Remove the front fender bolt with a wrench.

Replace the front fender by inserting the the long bolt, split ring and washer through the basket and fender. Then insert a washer, split ring and the locking bolt, tighten but not all the way.

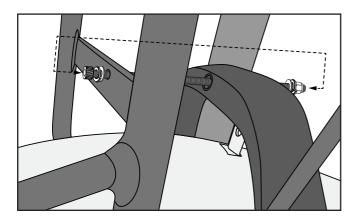


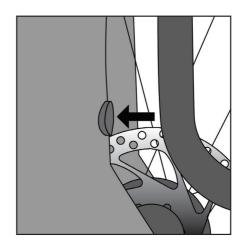

Step 3: Apply 2 felt pads to the front fork at the points of contact with the basket.

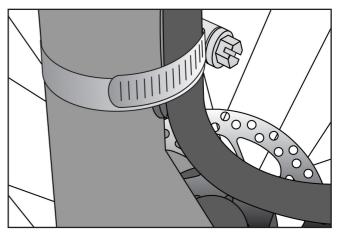

Step 4: Put clamp around basket and front fork and tighten. Apply to the right and left side. Make sure everything is fully tightened before riding.

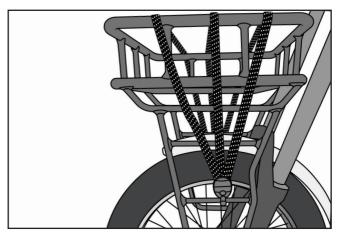

Step 5: Attach strap over the top of basket