


Maven **Running Boards**

— *Instruction Manual* —


Integralelectrics.com

Integral


Pieces & Tools:

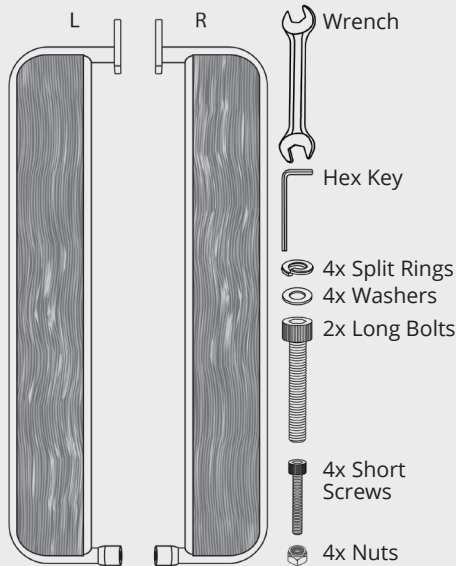

Identify the right and left running boards, and divide the screws and washers equally between the two.

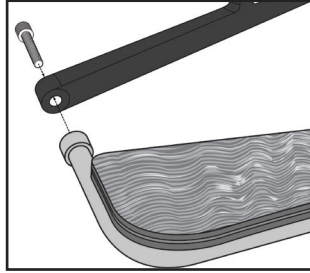

Step 1: Start on the right side, by inserting the largest bolt through the opening on the back of the frame. Use the hex key provided, to screw the back of the running board onto the bolt **HALF WAY**. Do not fully tighten.

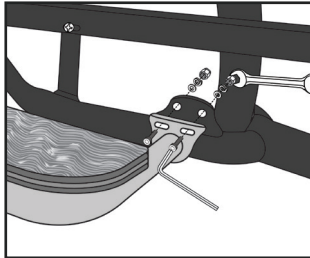

Step 2: Insert the two smaller screws through the running boards and then through the holes in the frame. Add the large washers on the back so they contact the backside of the frame. Then add the smaller split right lock washers, then add the nuts.

Tighten the nuts using the hex key and wrench provided until you meet some resistance, but do not fully tighten.

Step 3: Go back and tighten the large bolt in the back the frame. Now return to the front two bolts and tighten the nuts down fully.

Step 4: Repeat steps 2-7 on the left side to install the left running board.